
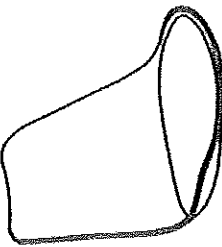
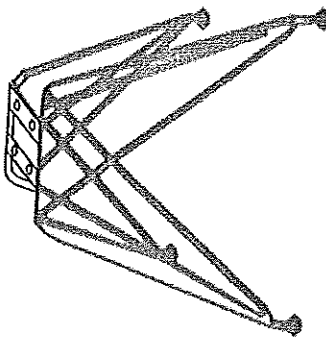
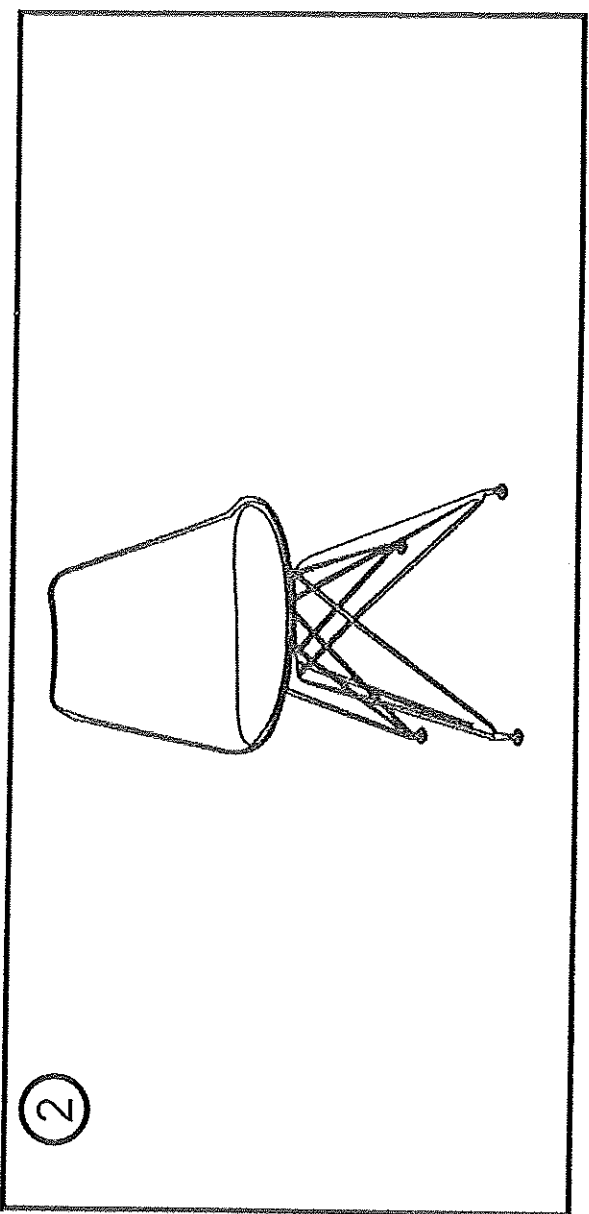


ASSEMBLY INSTRUCTION K-133TJ

(1)X1	
(2)X1	
(3)X4(M6x15x1.8MM)	
(4)X4(M6x20MM)	
(5)X1(5#)	

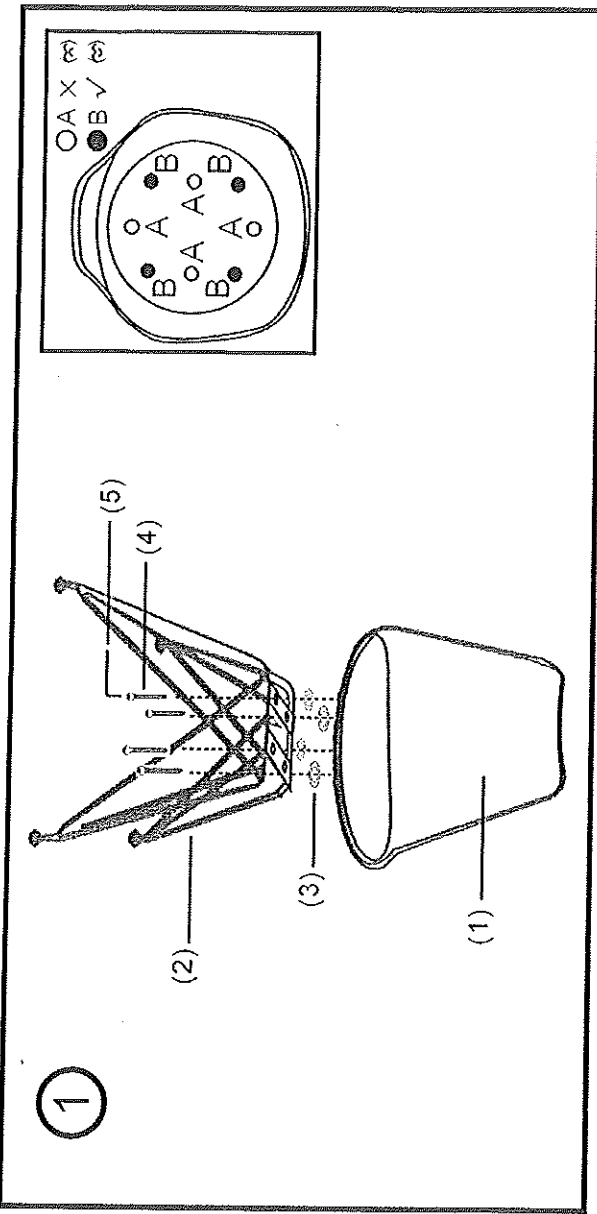

Please note that strong colored fabrics fx. denim. can discolor on to lighter color of a chair
Please tighten bolts and nuts again after some use of the item